

Important safety instructions for rechargeable batteries and batteries

Important NOTE

- Contact the store where you purchased the bike or a bicycle dealer for information regarding assembly and adjustment of the product that is not included in the user manual.
- Do not disassemble or modify this product.
- When using the product, comply with local laws and regulations.
- For safety reasons, please ensure that you read these instructions carefully before use and follow them exactly.

Important safety information

- For information about replacement options, please contact the place of purchase or a bicycle dealer.
- To avoid burns or other injuries caused by leakage, overheating, fire or explosion, observe the following points.

Handling the battery

- Never deform, modify or disassemble the battery and under no circumstances solder the battery cells. This may cause fluid to leak or the battery to overheat, burst or ignite.
- Do not place the battery near heat sources such as heaters. Do not heat the battery or throw it into a fire. This may cause the battery to burst or catch fire.
- Do not drop the battery or subject it to strong impacts. Failure to do so may result in a fire, rupture or overheating of the battery.
- Do not immerse the battery in fresh water or sea water, and do not allow the battery terminals to get wet. Otherwise the battery may overheat, burst or catch fire.
- Use the original charger supplied and observe the specified charging conditions when charging the specified battery. Otherwise the battery may overheat, burst or ignite.

Ensuring a safe journey

- Do not pay too much attention to the display while driving as this may lead to accidents.
- Check that the wheels are securely attached to the bike before riding. If the wheels are not securely attached, the bike may fall over and serious injury may occur.
- When riding an e-bike, make sure you are fully familiar with the bike's starting characteristics before riding on roads with multiple vehicle lanes and sidewalks. If the bike starts suddenly, it can cause accidents.
- Make sure your bike lights are on when you ride in the dark.

Safe use of the product

- Be sure to remove the battery and disconnect the charging cable before attaching or wiring any parts to the bike. Otherwise, you could receive an electric shock.
- If you are charging the battery mounted on the bike, do not move the bike during charging. Otherwise, the charger's power plug could come loose and no longer be fully seated in the socket, which could lead to a fire.
- When assembling this product, make sure you follow the instructions in the user manual. It is also recommended that you only use genuine parts. If bolts and nuts remain loose or the product is damaged, you could fall and suffer serious injury.
- Do not disassemble the product. Disassembly may result in personal injury.

- After reading the instructions carefully, keep them in a safe place for future reference.

Handling the battery

- If fluid from the battery gets into your eyes, immediately wash the affected area thoroughly with clean water, such as tap water. Do not rub your eyes. Then seek medical attention immediately. Otherwise, the battery fluid may damage your eyes.
- Do not charge the battery in places with high humidity or outdoors. This may cause
- lead to electric shocks.
- Do not plug or unplug the power cord when it is wet. Failure to do so could result in an electric shock. If water leaks from the power cord, dry it thoroughly before plugging it in.
- If the battery is not fully charged after 6 hours of charging, immediately unplug the battery to stop charging and contact the place of purchase. Otherwise, the battery may overheat, rupture, or catch fire.
- Do not use the battery if it has scratches or other external damage. Otherwise it may burst, overheat or cause operational problems.
- The operating temperature ranges of the battery are shown below. Do not use the battery outside these temperature ranges. If the battery is used or stored outside the temperature range, fire, injury, or operational problems may occur.
 1. During discharge: -10 °C - 50 °C
 2. During charging: 0 °C - 40 °C

cleaning

- The maintenance frequency may vary depending on riding conditions. Lubricate the chain regularly. Under no circumstances should you use alkaline or acidic cleaning agents to remove rust. If such cleaning agents are used, they may damage the chain, which could result in serious injury

Ensuring a safe journey

- To ensure safe riding, please follow the instructions in the bicycle owner's manual. Safe use of the product
- Check the battery charger regularly for damage, especially the cable, plug and casing. If the charger or adapter is damaged, do not use it until it has been repaired.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not allow children to play near the product.

Handling the battery

- Do not place the battery in a location exposed to direct sunlight, in a vehicle on a hot day, or in other hot places. This may cause battery leakage.

- If liquid comes into contact with skin or clothing, wash thoroughly with clean water. The liquid may damage your skin.
- become.
- Store the battery in a safe place out of the reach of children and animals.

cleaning

- If malfunctions or other problems occur, contact the place of purchase.
- Never attempt to modify the system yourself as this may cause problems with system operation.

Safe use of the product

- Make sure to provide unused connectors with a blind plug.
- Please contact a dealer for installation and adjustment of the product.
- The product is designed to be completely waterproof to withstand wet weather driving conditions. However, you should not intentionally leave it in
 - diving into water.
 - Do not clean your bike in a car wash with a high-pressure cleaner. If water penetrates the components, this could cause malfunctions or rust
 - lead.
 - Do not turn the bike upside down. This could damage the bike computer or gear lever.
 - Handle the product carefully and avoid strong shocks.
 - Even if the bike still functions as a normal bike when the battery is removed, the light will not light up when it is switched on. If the bike is ridden without a battery and no separate lighting system is used, it no longer complies with the StVZO and may therefore not be used on public paths/roads.
- When charging a battery mounted on a bike, you must pay attention to the following:
 - When charging, make sure that no water has accumulated on the charging port or charging plug.
 - Make sure the battery is locked into the battery holder before starting charging.
 - The battery must not be removed from the battery holder during charging.
 - You must not ride the bike with the charger connected.
 - Close the charging port cap when not charging.
 - Stabilize the bike to ensure it does not tip over during loading

Handling the battery

- When transporting an e-bike in a car, remove the battery from the bike and place the bike on a stable surface in the car.
- Before connecting the battery, make sure that there is no water accumulated in the port where the battery will be connected.
- The use of an original bicycle battery is recommended. If you use a battery from another manufacturer, read the battery's operating instructions carefully before use.

This symbol is only valid in the EU



Follow local regulations when disposing of used batteries. If you are unsure, contact the place of purchase or a bicycle dealer.

cleaning

- For product software updates, please contact your dealer. Please refer to the manufacturer's website for the most current information.
- Do not use thinner or other solvents to clean any of the products. Such agents could damage the surfaces.
- Use a damp, well-wrung cloth when cleaning the battery and plastic cover.
- If you have any questions regarding handling and maintenance, contact the place of purchase.
- Ordinary wear and tear and the aging of a product due to normal use are not covered by the warranty.